

# OUTBOARD ROTARIES

'FRISTAM SEALS'  
SPEC. SHEET


The **outboard** or **external** seal, is installed on the **atmosphere-side** and hence is considered the **secondary** seal. Fristam seals can be replaced with OEM replacements or other alternatives depending on application:



- ▶ **OEM replacement**
  - ▶ **Left-hand coil spring**
- OEM conical spring-drive design



N-T01F-x-xP-0XXX  
N-T07FU-x-xP-0XXX  
F-T01FU-x-xP-0XXX  
F-T02FU-x-xP-0XXX

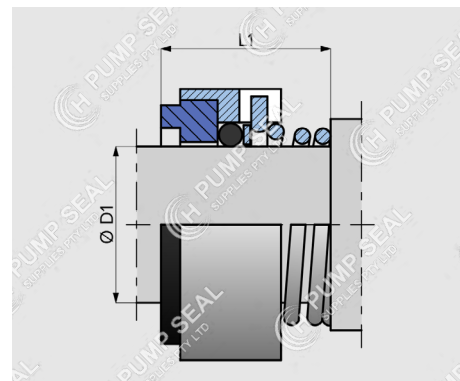


D1	L1
<b>22mm</b>	20.0
<b>30mm</b>	22.0
<b>35mm</b>	26.0



- ▶ **Rubber-encased 'Goetze' seal**
  - ▶ **Garter spring**
- Internal spring & garter spring-drive, used in chemical applications



Type XX09/3

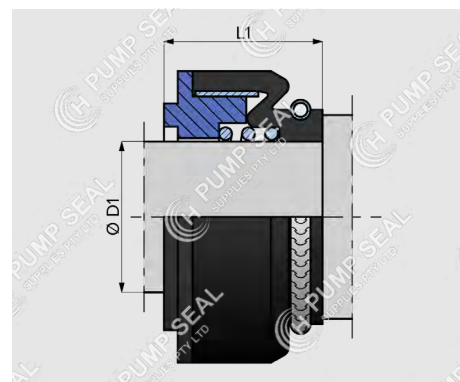

D1	L1
<b>22mm</b>	20.0